


## Air Cleaner Servicing

1. Raise the seat, remove the tool compartment and air cleaner cover.
2. Lift out the air cleaner retaining clip (1). Remove the air cleaner element (2) and clean by tapping, brushing lightly with a soft brush and then blowing air from the inside.
3. Remove the element holders (3) and breather element (4).

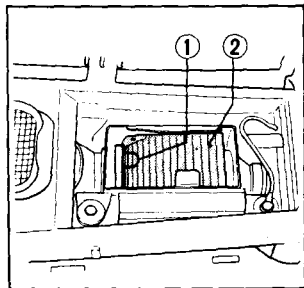

## Limpieza del filtro de aire

1. Levante el asiento, saque la bandeja de herramientas y quite la cubierta del filtro de aire.
2. Quite la abrazadera (1) del elemento del filtro de aire. Quite el elemento del filtro de aire (2), limpie el elemento dando golpecitos al mismo, acepillándolo ligeramente con un cepillo y, luego, soplando un aire comprimido del interior hacia fuera.
3. Quite la cubierta del elemento (3) y el elemento del respirador (4).

