

## Main Switch


The main switch is located directly below the indicator panel.

**OFF:** All electric circuits open. Engine cannot be started.  
Key can be removed.

**ON:** All electric circuits closed. Engine and light will operate. Key cannot be removed.

**P (PARKING):** All electric circuits open except for taillight.  
Key can be removed.

**LOCK (STEERING LOCK):** General type only. See page 30.

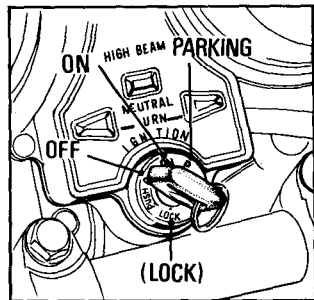

---

## Interruptor Principal

El interruptor principal está situado directamente debajo del tablero de indicadores del volante.

**OFF:** Todos los circuitos eléctricos están abiertos. No se puede poner el motor en marcha. Pero se puede retirar la llave.

**ON:** Todos los circuitos eléctricos están cerrados. El motor y las lámparas no pueden funcionar. La llave no se puede retirar.

**P (Estacionamiento):** Todos los circuitos eléctricos están cerrados, excepto aquel de las lámparas traseras. Se puede retirar la llave.

**LOCK (Cerraje de la rueda directriz):** Solamente para el tipo general de bicicletas.  
Vea pag. 30.