


Oil Filter Cleaning

To service the centrifugal filter, remove the oil filter cover ①, snap ring ② and filter cap ③ from the oil filter rotor ④. Then clean any sludge from the center of the rotor ④ with a lint-free cloth.

NOTE:

When assembling the filter cap, make sure that the rib on the cap fits in the groove of the rotor and install the snap ring.

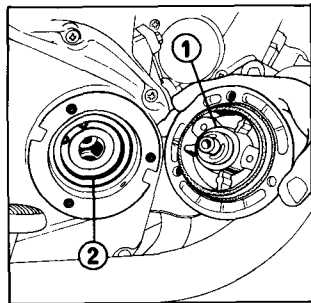

Limpieza del Filtro de Aceite

Cuando efectua un servicio de mantenimiento al filtro centrífugo, saca Ud. la cubierta del filtro de aceite ①, el anillo de resorte ② y la tapa del filtro ③ del rotor del filtro de aceite ④. En seguida limpia el sedimento del centro del rotor ④ con un paño sin hilachas.

Nota:

Cuando monta la tapa del filtro asegurese que los rebordes sobre la tapa corresponden exactamente a los encajes del rotor y en seguida instale el anillo de resorte.

