


Front Wheel Removal

1. Raise the wheel off the ground by placing a support under the engine.
2. Remove the speedometer cable ② from the front wheel hub assembly.
3. Remove the axle holder nuts ① and axle holders and the front wheel assembly. Reverse the sequence for reinstallation.

NOTE:

Do not press the brake lever when the wheel is removed as this causes the caliper piston to come out, spilling brake fluid. This calls for servicing of the entire brake system.

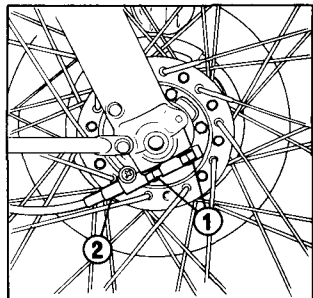

Desmontaje de la rueda delantera

1. Levantar la rueda desde el suelo colocando un soporte debajo del motor.
2. Quitar los cables ② del indicador de velocidad desde el conjunto de cubo de la rueda delantera.
3. Quitar las tuercas de porta-eje ① y el porta-eje así como el conjunto de la rueda delantera. Para remontaje, efectuar las operaciones en orden inverso.

NOTA:

No prensar la palanca de freno cuando la rueda está desmontada; porque el prensarla ocasiona desenganche del pistón provocando la pérdida del fluido de freno. En tal caso, todo el sistema de frenaje deberá desmontarse.