


## Fairing Pockets

To remove the left pocket lid (1), turn the knob (2) clockwise and pull up the lid.

To remove the right pocket lid (3) insert the ignition switch key (4), turn it clockwise and pull up the lid.

This owner's manual and other documents should be locked in the right pocket. When washing your motorcycle, be careful not to flood this area with water.

To attach either pocket lid, align slot in front edge of lid with lug in pocket; push rear end of lid down until it snaps shut.

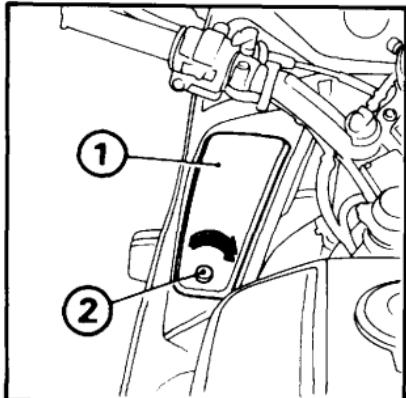

## Bolsas del carenado

Para quitar la tapa de la bolsa izquierda (1), girar la perilla (2) en el sentido de las agujas del reloj y tirar de la tapa hacia arriba.

Para quitar la tapa (3) de la bolsa derecha, insertar la llave de encendido (4), girarla hacia el sentido de las agujas del reloj y tirar de la tapa hacia arriba.

Este manual y otros documentos deberá meterse dentro de la bolsa derecha. Al lavar la motocicleta, tener cuidado de no inundar este área con agua.

