


Accessory Circuits

Electrical connections (1) are provided in the fairing for 12V DC optional accessories. There are three fused circuits, 5A, 2A and 1A. The fuses (2) are located in the locking right fairing pocket. Power is available to the accessory circuits when the ignition switch is turned to ON, ACC or P except 1A fused circuit.

Review the loading and accessories information on pages 14–24 and when replacing fuses, follow the instructions on pages 174 and 176.

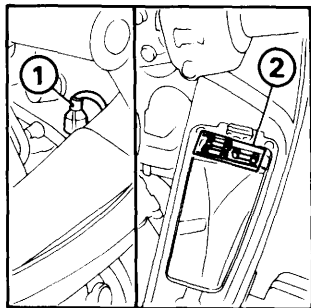

Circuito para accesorios

Se proveen conexiones eléctricas (1) en el carenado para accesorios opcionales de 12 V C.C. Hay tres circuitos con fusibles de 5A, 2A y 1A. Los fusibles (2) están situados dentro de la bolsa derecha del carenado. Se alimentará energía a los circuitos para accesorios cuando el interruptor de encendido esté en las posiciones ON, ACC o p excepto para el circuito de fusible de 1A.

Revisar la información de carga y accesorios de las páginas 14–24 y seguir las instrucciones de las páginas 174 y 176 al cambiar los posibles.