


## MAINTENANCE

### Engine Oil

Check engine oil level each day before operating the motorcycle.

1. Put the motorcycle on its center stand on level ground.
2. Start the engine and let it idle for a few minutes.
3. Stop the engine and remove the oil filler cap/dipstick (1), wipe it clean, and insert the dipstick without screwing it in. Remove the dipstick and check the oil level. The oil level should be between the upper (2) and lower (3) marks on the dipstick.
4. If required, add the specified oil up to the upper level mark, then reinstall the oil filler cap/dipstick.

**CAUTION:** Running the engine with insufficient oil can cause serious engine damage.

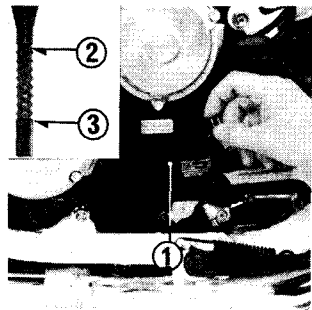

## ENTRETIEN

### Huile moteur

**Contrôler le niveau d'huile du moteur chaque jour avant de conduire la motocyclette.**

1. Lever la machine sur sa béquille centrale sur un sol horizontal.
2. Mettre le moteur en marche et le laisser tourner au ralenti pendant quelques minutes.
3. Arrêter le moteur et retirer la jauge/bouchon de remplissage d'huile (1), l'essuyer et la remettre sans la visser. Retirer à nouveau la jauge et vérifier le niveau d'huile. Le niveau d'huile doit se trouver entre les repères de niveau supérieur (2) et inférieur (3) sur la jauge.
4. Si cela est nécessaire, faire l'appoint d'huile préconisée jusqu'au repère de niveau supérieur, puis remettre la jauge/bouchon de remplissage d'huile en place.

**PRECAUTION:** En faisant tourner le moteur avec une quantité d'huile insuffisante risque d'entraîner une grave détérioration de celui-ci.