


Air Cleaner Servicing

1. Remove the right side cover.
2. Remove the air cleaner cover (2) by unscrewing the nuts (1). Remove the element (3).
3. Wash the cleaner element (3) in clean solvent and allow to dry thoroughly.
4. Soak the air cleaner element in clean gear oil (SAE80-SAE90) until saturated, then squeeze out excess oil.
5. Reinstall the air cleaner and side cover.

WARNING: Gasoline or low flash point solvents are highly flammable and must not be used to clean the element.

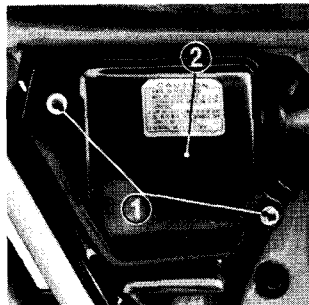

Mantenimiento del filtro de aire

1. Quite la cubierta del lado derecho.
2. Quite la cubierta del filtro de aire (2) aflojando las tuercas (1). Desarme el elemento (3).
3. Lave el elemento del filtro (3) en una solución limpia y déjela secar completamente.
4. Bañe el elemento del filtro de aire en el aceite de engranaje (SAE80-SAE90) limpio hasta que sature. Luego, exprímalo para purgar el exceso del aceite.
5. Reinstall the air cleaner and side cover.

PRECAUCION: La gasolina y otras soluciones de bajo punto de inflamabilidad no son propias para utilizarse para lavar el elemento, porque son demasiado inflamables y aun, a veces, explosivas.

