


6. Pull out the screen filter (2) and wash it in clean solvent.
7. Separate the clutch outer cover (3) from the clutch outer (4).
8. Clean any sludge from the center of the clutch outer (4) with a lintfree cloth.
9. Reinstall the component parts.
10. Fill with approx. 0.9 liters (0.9 U.S. qt., 0.8 Imp. qt.) of recommended grade oil. Start the engine and run for several minutes; then stop it and recheck the oil level. Add oil if necessary.

**CAUTION:** Change oil more frequently than recommended on page 102 depending upon the severity of dust conditions.

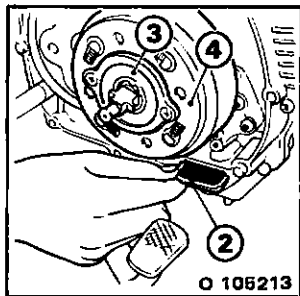

7. Retire el elemento del filtro (2) y lávelo en una solución de detergente limpia.
8. Separe la cubierta de la campana de embrague exterior (3) de la campana de embrague exterior (4).
9. Limpie la parte central de la campana de embrague exterior (4) para eliminar todos sedimentos acumulados con un paño limpio.
10. Remonte todas las piezas componentes desmontadas.
11. Rellene el cárter con 0.9 litros, aproximadamente, del aceite de la calidad recomendada. Arranque el motor y haga marchar por unos minutos; luego, párelo y revise el nivel de aceite otra vez. Agregue el aceite, si es necesario.

**PRECAUCIONES:** Cambie el aceite más frecuentemente que lo recomendado en la página 102 conforme a las condiciones de polvos de la zona de conducción.

