


Throttle Operation

1. Check for smooth rotation of the throttle grip from the fully open to the fully closed position at both full steering positions.
2. Check the throttle grip play at the grip. Standard play is approx. 10–15° of the grip rotation. To adjust the major free play, loosen the lock nut (1) and turn the upper adjuster (2). To adjust the minor free play, remove the rubber cap (3) and turn the lower adjuster (4).

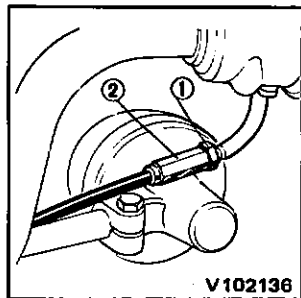

Operación del acelerador

1. Vea si la empuñadura del acelerador funciona suavemente haciéndola rotar desde la posición de plenos gases a cierre completo teniendo el manubrio girado por completo a derecha e izquierda.
2. Verifique el juego de la empuñadura del acelerador. El juego estándar es de 10 – 15°. Para un mayor juego afloje la tuerca (1) y gire el ajustador (2) superior. Para disminuir el juego, retire la tapa de caucho (3) y gire el ajustador (4) inferior.

