


Oil change:

Engine oil quality is the chief factor affecting engine service life.

Perform the oil change in the following manner. Drain the oil while the engine is still warm.

- 1. Remove the oil filler cap (3).**
- 2. Place an empty oil drain pan under the crankcase and then remove the drain plug (4). Also remove the oil filter bolt (5) and filter element.**

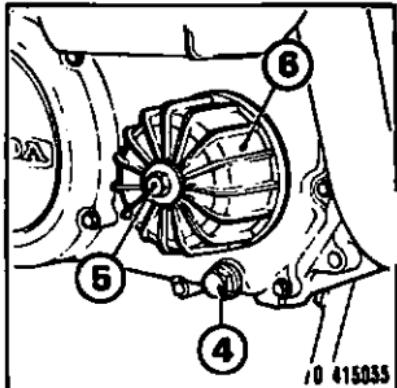

Cambio del aceite:

La calidad del aceite del motor es el factor principal que afecta a la vida de servicio del motor.

Efectúe el cambio de aceite de la siguiente manera:

Drene el aceite mientras el motor está todavía caliente.

- 1. Quite la tapa del llenador de aceite (3).**
- 2. Coloque un recipiente vacío de aceite debajo del cárter y luego quite los tapón de drenaje (4). También quite el perno del filtro de aceite (5) y el elemento del filtro.**