

## **Headlight Dimmer Switch**

Turn the headlight dimmer switch (1) to "Lo" for low beam, and "Hi" for high beam.

## **Passing Light Control Switch**


When this switch (2) is pressed, the headlight flashes on to signal approaching cars or when passing.

## **Turn Signal Switch**

To signal a left turn, move the switch (3) to the "L" position. To signal a right turn, move the switch (3) to the "R" position.

## **Horn Button**

When this button (4) is pressed the horn sounds.

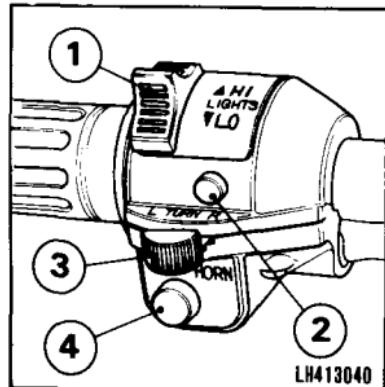

## **Interruptor conmutador del haz del faro delantero**

Coloque el interruptor conmutador del haz del faro delantero (1) en posición "Lo" para obtener el haz bajo, y en posición "Hi" para el alto.

## **Interruptor de mando de la luz de paso**

Al oprimir este interruptor (2), el faro ilumina para dar indicaciones a vehículos o para pasar.

## **Interruptor de señales de cruce**

Coloque el interruptor (3) en la posición "L" para indicar vuelta a la izquierda, o en la posición "R" para vuelta a la derecha.

## **Interruptor de bocina**

Al oprimir este interruptor (4), sonará la bocina.