


## Crankcase Breather

1. Remove the two drain plugs (1) from the tubes, and drain deposits and water.
2. Reinstall the two drain plugs.

### NOTE:

- Service more frequently when ridden in rain, at full throttle or after the motorcycle is washed or overturned.
- Service if the deposit level can be seen in the transparent section of the drain tubes.

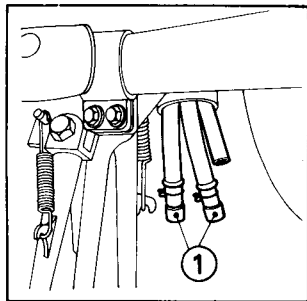

## Orificio de respiración del carter

1. Quitar los dos tapones de drenaje (1) de los tubos, y drenar los depósitos y el agua.
2. Volver a instalar los dos tapones de drenaje.

### NOTA:

- Inspeccionarlo más frecuentemente en tiempo lluvioso, cuando se marche a alta velocidad o cuando la motocicleta sea lavada o se haya caído.
- Dar servicio si el nivel del depósito puede ser visto en la sección transparente de los tubos de drenaje.