

Headlight maintenance


Aiming adjustment:

The headlight must be kept properly adjusted for safe nighttime riding.

Vertical adjustment is made by pivoting the headlight housing with the bolts ① loosened. Horizontal adjustment is made by turning the adjusting screw ② in or out. Retighten the fasteners when the adjustment is completed.

Bulb replacement:

1. Remove the two 5 mm screws ③.

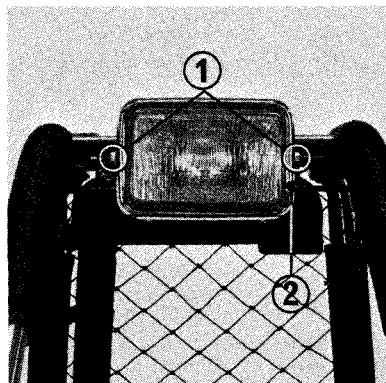

Entretien du phare

Réglage du phare:

Le phare doit être gradé bien réglé pour une conduite de nuit sûre.

Le réglage vertical s'effectue en pivotant le cuvelage de phare avec les boulons ① desserrés. Le réglage horizontal s'effectue en agissant sur la vis de réglage ②. Resserrer les attaches une fois le réglage terminé.

Remplacement de l'ampoule:

1. Déposer les deux vis de 5 mm ③

