


Memory Button (5):

This button is used to memorize a tuned station's location or to set the clock's time.

To use memory, turn the radio to the desired station, press the memory button (5), then press one of the preset buttons (6); the station will be memorized on that preset button.

NOTE: If the battery is disconnected, memory will be lost and the station must be reset.

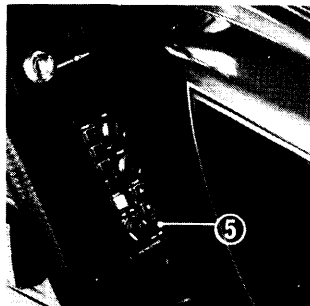

Botón de memoria (5):

Este botón se usa para memorizar una emisora localizada o para fijar la hora del reloj.

Para usar la memoria, sintonícese la emisora deseada, presiónese el botón de memoria (5), luego presiónese uno de los botones de preselección (6); la emisora será memorizada en ese botón de preselección.

NOTA: Si se desconecta la batería, se perderá la memoria y se deberá ajustar de nuevo la emisora.