


### Fuse replacement (U type):

The fuse holders (1) for the motorcycle's radio are located behind the left turn signal lamp. Remove the turn signal lens and fuse holder band. The specified fuses are:

Main power supply:	2A
Backup power supply:	1A
Booster amplifier:	5A

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. In this case, the electrical system should be checked visually for damaged insulation or other possible faults. If the problem cannot be located visually, the motorcycle should be examined by an authorized Honda dealer.

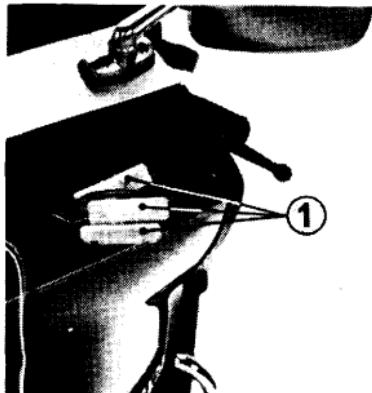

---

### Cambio de fusibles (Tipo U):

Los soportes de los fusibles (1) para la radio de la moto se encuentran detrás del piloto indicador de giro a la izquierda. Retire la lente del piloto y el cable de los fusibles.

Los fusibles especificados son:

Alimentación de corriente principal	2A
Alimentación de corriente de protección	1A
Amplificador de refuerzo	5A

Cuando se producen frecuentes fallos de los fusibles, normalmente se indica que hay un pequeño cortocircuito o una sobrecarga en el sistema eléctrico. En este caso se deberá comprobar visualmente el sistema eléctrico en busca de un aislamiento dañado u otros posibles fallos. Un distribuidor autorizado de Honda deberá examinar la motocicleta si el problema no se puede localizar visualmente.