


Air Pressure/Coolant Temperature L.C. display (5)

The air pressure/coolant temperature l.c. normally displays coolant temperature. To indicate air pressure, press the Suspension Selector Button to FRONT (1) or REAR (2). The l.c. will then display the approximate air pressure for the Front (FR) or Rear (RR) suspension, whichever was selected. When the Suspension Selector Button is released, the l.c. display returns to show coolant temperature.

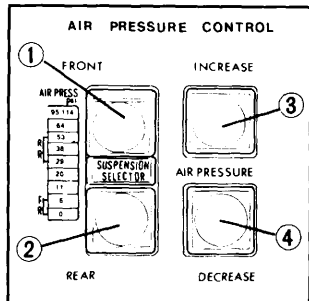

Dis positivo de exposición de la presión del aire/temperatura de refrigeración L.C. (5)

La presión del aire/temperatura de refrigeración l.c. muestra la temperatura de refrigeración normalmente. Para indicar la presión del aire pulse el botón selector de suspensión a FRONT (1) o REAR (2). Entonces el i.c. mostrará la presión aprox. para la suspensión delantera (FR) o trasera (RR) según la que se haya escogido. Cuando se suelte el botón el dispositivo l.c. vuelve a mostrar la temperatura de refrigeración.

