


Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the speed sensor set screw (1) and remove the speed sensor (2).
3. Remove the right and left caliper assembly by removing the caliper mounting bolts (3).

CAUTION:

- Support the caliper assembly so that it does not hang from the brake hose. Do not twist the brake hose.

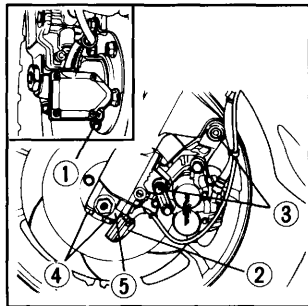

Desmontaje de la Rueda Delantera

1. Elevar la rueda delantera del suelo colocando un bloque de apoyo bajo del motor.
2. Retire el tornillo de ajuste del sensor de velocidad (1) y retire el sensor de velocidad (2).
3. Quitar el conjunto del calibrador izquierdo y derecho extrayendo para ello los pernos de montaje del calibrador (3).

PRECAUCION:

- Apoyar el conjunto del calibrador para que no quede colgando de la manguera del freno. Ne retorcer la manguera del freno.