


Ventilation Louvers and Lids

This motorcycle has ventilation louvers and lids. Open the louvers or lids to direct air flow through the fairing for warm weather riding.

Dash ventilation louvers:

Move the levers (1) right or left, or up or down, to adjust the louvers. To close the louvers, move the levers in the arrow directions (toward the inside) fully.

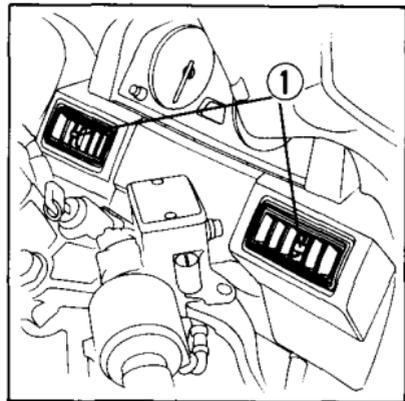

Couvercles et volets de ventilation

Cette motocyclette possède des couvercles et volets de ventilation. Ouvrir les volets ou les couvercles pour diriger l'écoulement de l'air à travers le carénage pendant une conduite par temps chaud.

Volets de ventilation de tableau de bord:

Déplacer les leviers (1) vers la droite ou la gauche, vers le haut ou le bas pour ajuster les volets. Pour fermer les volets, déplacer les leviers à fond dans la direction de la flèche (vers l'intérieur).