

### Headlight Dimmer Switch

Push the dimmer switch (1) to "HI" to select high beam or to "LO" to select low beam.

### Passing Light Control Switch


When this switch (2) is pressed, the headlight flashes on to signal approaching cars or when passing.

### Turn Signal Switch (3)

Move to L to signal a left turn, R to signal a right turn. Press to turn signal off.

### Horn Button

When this button (4) is pressed the horn sounds.

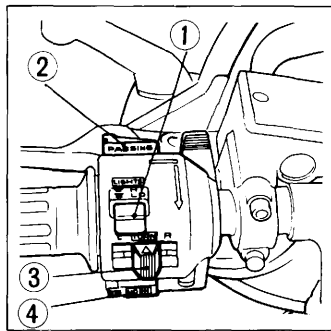

### Inverseur code-phare

Déplacer l'inverseur (1) vers "H" pour choisir le faisceau du feu de route et vers "LO" pour obtenir un faisceau rapproché.

### Commande des feux de dépassement

Exercer une pression sur le bouton (2) pour le fonctionnement de l'avertisseur lumineux pour dépassement.

### Inverseur des clignotants (3)

Déplacer vers L pour signaler un virage à gauche, vers R pour signaler un virage à droite. Enfoncer pour annuler le signal.

### Commande d'avertisseur

Exercer une pression sur le bouton d'avertisseur (4) pour assurer le fonctionnement de l'avertisseur sonore.