


## MAINTENANCE

### Engine Oil

Check engine oil level each day before operating the motorcycle.

1. Put the motorcycle on its center stand on level ground.
2. Check the oil level in the oil inspection window (3) on the lower right side of the crankcase cover. The oil level should be between the upper (1) and lower (2) level marks. If the inside of the window is dirty, turn the wiper (4) to clean the window.
3. If required, remove the filler cap (5), add the specified oil up to the upper level mark, then reinstall the filler cap.

**CAUTION:** Running the engine with insufficient oil can cause serious engine damage.

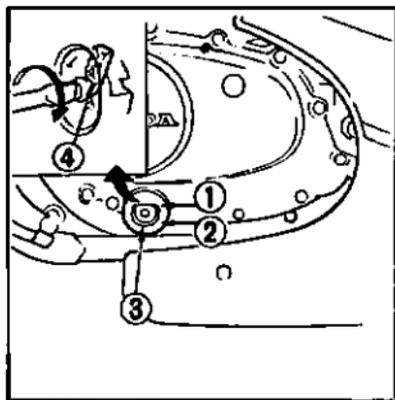

## ENTRETIEN

### Huile moteur

Contrôler le niveau d'huile du moteur chaque jour avant de conduire la motocyclette.

1. Lever la machine sur sa béquille centrale sur un sol plat.
2. Contrôler le niveau d'huile par la fenêtre d'inspection (3) située sur le côté inférieur gauche du carter moteur.  
Le niveau d'huile doit se trouver entre les repères de niveau supérieur (1) et inférieur (2). Si l'intérieur de la fenêtre est sale, faire tourner le dispositif d'essuyage (4) afin de nettoyer la fenêtre.
3. Si cela est nécessaire, retirer le bouchon de remplissage (5) et ajouter l'huile spécifiée jusqu'au repère de niveau supérieur, puis remettre le bouchon en place.

**PRECAUTION:** Faire tourner le moteur avec une quantité d'huile insuffisante risque d'entraîner une grave détérioration de celui-ci.