


7. To install the front wheel assembly, align the cut-ways in the brake disc with the retainers on front wheel hub and align the speedometer gearbox in brake caliper with the gearbox retainer in the wheel and wish groove (2) in brake carrier, bracket (3) with tongue (1) on left fork leg.

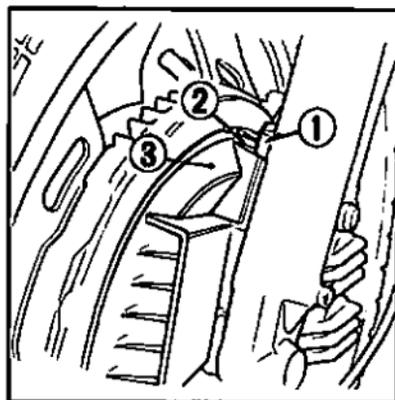

Insert the front axle and tighten to specified torque.

**Axle: 55–65 N·m (5.5–6.5 kg·m, 39–49 ft·lb)**

Install the axle holder facing the allow mark to front and tighten the forward nut first and the nut to specified torques.

**Axle holder nut: 18–25 N·m (1.8–2.5 kg·m, 14–19 ft·lb)**

7. Pour installer l'ensemble de roue avant, aligner les encoches du disque de frein avec les pièces de retenue prévues sur le moyeu de roue avant et aligner le boîtier du compteur de vitesse dans l'étrier de frein avec le dispositif de retenue prévu sur la roue et avec la rainure (2) de l'applique (3) de l'étrier et la languette (1) sur la patte de fourche gauche.

Insérer l'axe avant et le serrer au couple spécifié.

**Axe: 55–65 N·m (5,5–6,5 kg·m, 39–49 ft·lb)**

Installer le palier d'axe en orientant le repère en creux vers l'avant; serrer l'écrou avant tout d'abord au couple spécifié.

**Écrou de palier d'axe: 18–25 N·m (1,8–2,5 kg·m, 14–19 ft·lb)**