

FUEL AND OIL

Fuel Filler Cap


The fuel tank holds 7.0 liters (1.5 Imp. gal.) including the 1.5 liters (0.33 Imp. gal.) in the reserve supply. To open the filler cap (1) pull off the breather tube (2) from the steering stem nut (3) and turn the cap (1) counterclockwise. Use low-lead or unleaded gasoline with an octane number of 91 or higher. If this is not available, leaded regular gasoline can be used.

FOR NEW SOUTH WALES ONLY:

Use unleaded fuel with a research octane number of 91 or higher.

WARNING:

- Do not overfill the tank (there should be no fuel in the filler neck). After refueling, make sure the filler cap is closed securely.
- Gasoline is extremely flammable and even explosive under certain conditions. Whenever the filler cap is open, be sure the engine is stopped and that there are no lighted cigarettes or flames nearby.

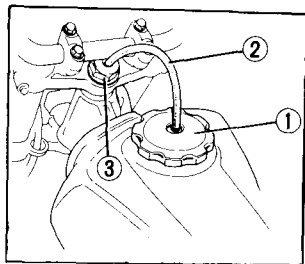

COMBUSTIBLE Y ACEITE

Tapa del llenador de combustible

La capacidad del depósito de combustible es de 7,0 litros, incluyendo 1,5 litros en la reserva. Para abrir la tapa del llenado (1), hale el tubo del respiradero (2) de la tuerca de la varilla de dirección (3) y gire la tapa (1) a la izquierda. Gasolina con poco contenido de plomo, o sin plomo, de 91 octanos o más.

PRECAUCION:

- No llene excesivamente el depósito (no debe haber combustible en el cuello del llenador). Después de llenar, asegúrese de que la tapa del llenador esté bien cerrada.
- La gasolina es extremadamente inflamable y hasta explosiva bajo ciertas condiciones. Cuando la tapa del depósito esté abierta, asegúrese de que el motor esté apagado y que no haya cigarrillos encendidos o fuego cerca.