


Oil filter rotor cleaning:

Clean the filter rotor after draining the oil.

1. Remove the kickstarter pedal.
2. Remove the rear brake adjusting nut and unhook the rear brake stoplight switch spring.
3. Remove the rear brake pedal and return spring.
4. Remove the exhaust pipe protector.
5. Disconnect the clutch cable from the clutch arm.
6. Remove the right crankcase cover.
7. Remove the rotor cover and clean any sludge from the center of the rotor (!) with a lint-free cloth.

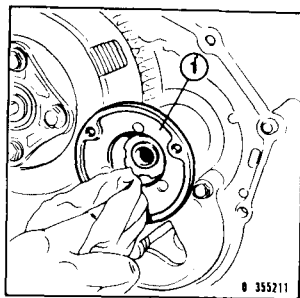

Limpieza del rotor del filtro de aceite:

Limpie el rotor del filtro de aceite después de haber drenado el aceite de la siguiente manera:

1. Desmonte el pedal del arranque de pie.
2. Quite la tuerca de ajuste del freno trasero y desenganche el resorte para interruptor de luz de freno trasero.
3. Desmonte el pedal del freno trasero y el resorte de retorno.
4. Desmonte la protección del tubo de escape.
5. Desconecte el cable de embrague del brazo de embrague.
6. Desmonte la cubierta del cárter del lado derecho.
7. Desmonte la cubierta del rotor y límpielo completamente para eliminar el cieno acumulado en el centro del rotor (1) con un paño limpio y seco que no suelte pelusa.