


## Brakes

### Front brake adjustment:

Raise the front wheel off the ground by placing a support block under the engine, spin the front wheel by hand and measure the free play distance that the front brake lever moves before the brake starts to engage. Free play, measured at the tip of the brake lever, should be maintained at 20–30 mm (3/4–1 1/4 in.) Major adjustment should be made using the lower adjuster (1) at the front wheel. Minor adjustment can be made with the upper adjuster (2) on the brake lever. To adjust, loosen the lock nut (3) and turn the adjuster (1) or (2). Turning the adjuster in the direction (A) will decrease the free play.

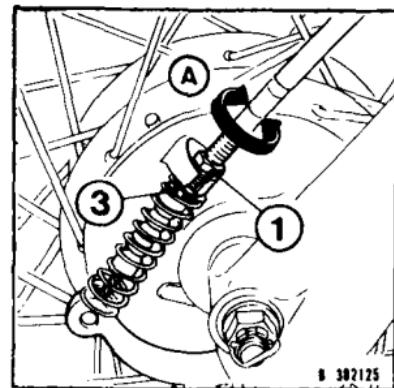

## Frenos

### Ajuste del freno delantero:

Levante la rueda delantera del suelo colocando un bloque de soporte debajo del motor, haga girar la rueda delantera a mano y mida el juego libre de la palanca de freno delantero antes de que el freno comience a engranar.

El juego libre, medido en el extremo de la palanca de freno, deberá mantenerse de 20–30 mm. Los ajustes mayores deberán efectuarse utilizando el ajustador inferior (1) de la rueda delantera. Los ajustes menores podrán efectuarse con el ajustador superior (2) en la palanca de freno. Para ajustar el freno, afloje la tuerca fiadora (3) y gire el ajustador (1) o (2). Girando el ajustador en la dirección (A) reducirá el juego libre.

