


3. To adjust the drive chain, proceed as follows:
 - a. Loosen the rear axle nut (2).
 - b. Turn the adjusting nuts (3) as necessary.
 - c. Make sure the chain adjusters on both sides are at the same index mark (4) locations. Tighten the rear axle nut.

CAUTION: Torque for the axle nut: 35–50 N·m (3.5–5.0 kg·m, 25–36 ft·lb).

- d. Tighten the adjusting nuts.
- e. Check the rear brake pedal free play and adjust as necessary.

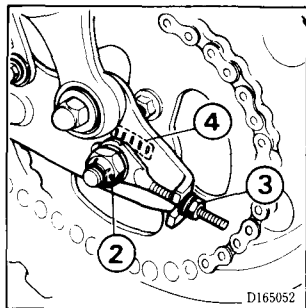

-
3. Para ajustar la cadena de transmisión, proceda como sigue:
 - a. Afloje la tuerca del eje trasero (2).
 - b. Haga girar las tuercas de ajuste (3), tanto como sea necesario.
 - c. Asegúrese de que los ajustadores de cadenas en ambos lados estén en las mismas marcas de índice (4). A priede la tuerca del eje trasero.

PRECAUCION: Torsión de la tuerca del eje: 35-50 N·m (3,5–5,0 kg·m).

- d. Apriete las tuercas de ajuste.
- e. Revise el juego libre del pedal de freno trasero y ajústelo si es necesario.