


Fuse Replacement

The fuse holder (1) is located behind the left side cover. The recommended fuses are 7A (SA, U, D) [15A (G, S)].

When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

WARNING: Never use a fuse with a different rating from that specified on the fuse holder and never use conductive material to replace a fuse.

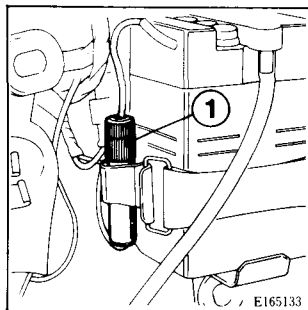

Reemplazo de fusibles

La porta fusibles (1) está situada detrás de la cubierta lateral izquierda. Los fusibles recomendables son los de 7A (SA, U, D) [15A (G, S)]

Cuando es produzca quemadura frecuente de fusible, esto indica la existencia de un corto circuito o sobrecarga en el sistema eléctrico. En tal caso, consulte con su agente HONDA.

PRECAUCION: No utilice nunca un fusible que tenga un otro régimen que lo especificado en el portafusibles, nunca utilice otro material conductor en lugar de un fusible.