Base color mode
The display switches as follows by pressing and holding the SEL button:

COL USER	→	COL DCT	→	COL GEAR	→	COL REV
User setting mode		**DCT mode** NC750XD		**Gear position mode**		**Engine rev mode**
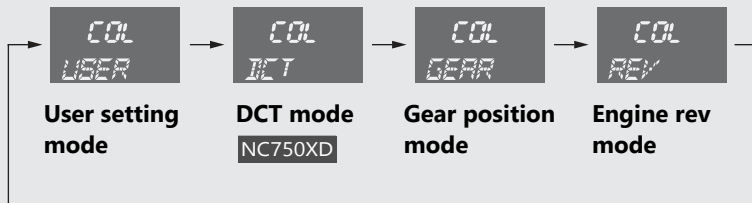
When the mode you want to set is appears, release the SEL button.

User setting mode
You can change the tachometer segment color from the following color.
Default setting is "BLUE".

Color								
WHITE	RED	AMBER	YELLOW	GREEN	AQUA	BLUE	VIOLET	PINK

To set the color: