


When storing the anti-theft locking cable in the left fairing pocket perform as follows.

1. Insert the locking piece (3) through the loop (4) at the other side of the cable.
2. Windup the cable five times.
3. Again insert the locking piece into the loop.
4. Hook the locking piece with the chain and store in the compartment.

**NOTE:** When washing your motorcycle, be careful not to flood this area with water.

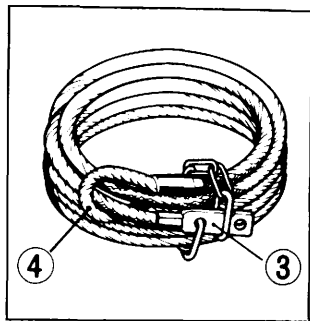

Al guardar la cadena antirrobo en la bolsa izquierda del carena, hacerlo de la forma siguiente:

1. Introduzca la pieza de bloqueo (3) a través de la anilla (4) del otro lado del cable.
2. Enrolle cinco veces el cable.
3. Introduzca de nuevo la pieza de bloqueo en la anilla.
4. Enganche la pieza de bloqueo en la cadena y guárdela en el compartimiento.

**NOTA:** Al lavar su moto, tenga cuidado de no echar agua en esta parte.