

## Installation

1. Loosely attach the upper and lower ends of the subframe (1) to the mainframe while connecting the air cleaner connecting tube to the carburetor.


Be careful not to bend the subframe.

Install the subframe upper mounting bolt (2) and subframe lower mounting bolts (3).

Tighten the upper mounting bolt and lower mounting bolts to each specified torque:


upper bolt: 30 N·m (3.1 kgf·m, 22 lbf·ft)

lower bolt: 49 N·m (5.0 kgf·m, 36 lbf·ft)

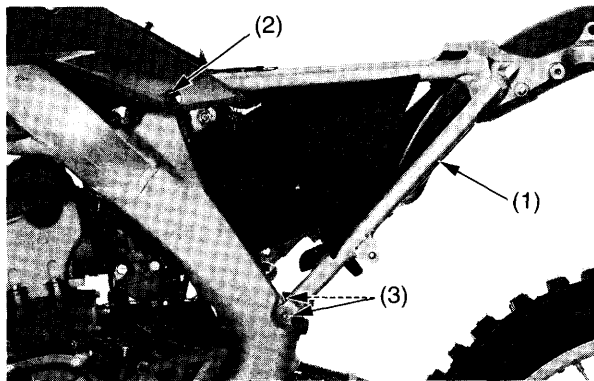

- (1) subframe
- (2) subframe upper mounting bolt
- (3) subframe lower mounting bolts

2. Tighten the screw (4) on the air cleaner connecting tube clamp (5).
3. Hook the fuel tank band (6).
4. Connect the crankcase breather tube (7).

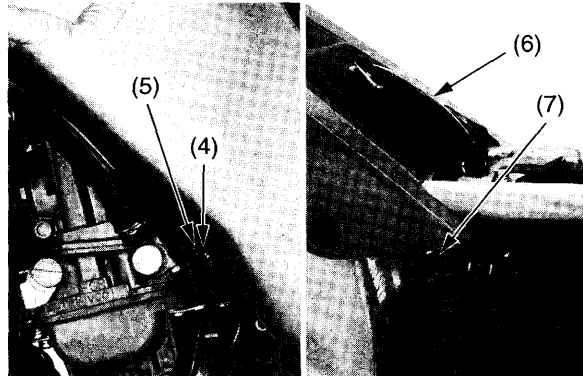

- (4) screw
- (5) air cleaner connecting tube clamp
- (6) fuel tank band
- (7) crankcase breather tube

5. Install the seat (page 29).
6. Install and tighten the exhaust joint pipe and muffler (pages 88 – 89).