




Lower Fairing Removal

LEFT SIDE

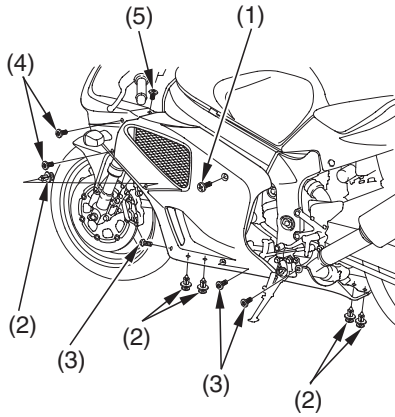

(1) bolt A
(2) clips
(3) bolts B

(4) bolts C
(5) bolts D

Removal

1. Turn the bolt A (1) 90° counterclockwise.
2. Remove the clips (2).
3. Remove the bolts B (3), bolts C (4) and bolts D (5).

Installation

- Installation can be done in the reverse order of removal.