


Install the new O-ring to the water by-pass cover.




Install the water by-pass cover to the cylinder and tighten the cover bolts securely.

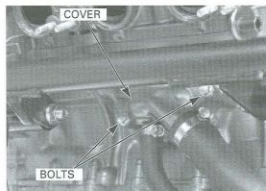

Install the gearshift linkage to the spindle by aligning the slit of the shift pedal and the punch mark of the spindle. Tighten the bolt to the specified torque.

**TORQUE: 20 N·m (2.0 kgf·m, 14 lbf·ft)**

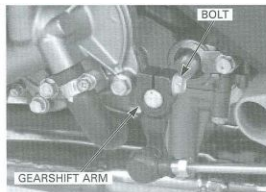

Install the following:

- wire band
- cam pulse generator 2P connector

