



## HYDRAULIC BRAKE

Make sure that the pad shim is in place.  
Install the pivot boot and make sure it is properly seated.

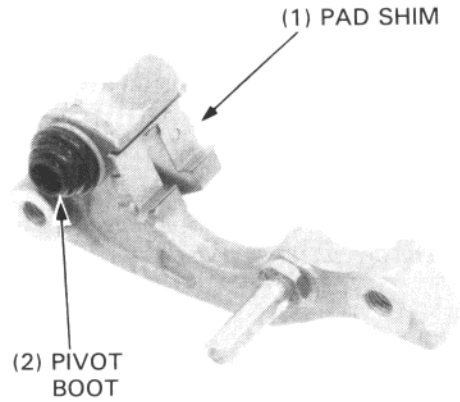

Apply silicone grease to the caliper bracket pins and pivot boot.

Install the caliper bracket and pad spring.

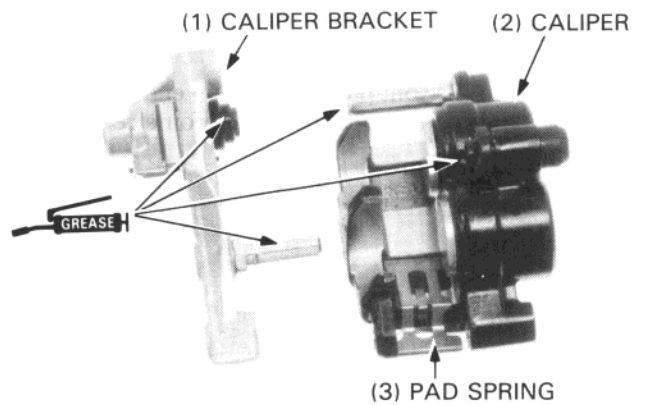

### INSTALLATION

Install the caliper on the fork leg and tighten the caliper bolts.

**TORQUE: 27 N·m (2.7 kg-m, 20 ft-lb)**

Install the pads and tighten the pad pin.

**TORQUE: 18 N·m (1.8 kg-m, 13 ft-lb)**

Install the pad pin plug.

Connect the brake hose and tighten the hose bolt.

Fill the master cylinder and bleed the brake system (page 14-4).

