



Tighten the exhaust pipe clamp bolt to the specified torque.

TORQUE: 20 N·m (2.0 kgf·m , 14 lbf·ft)

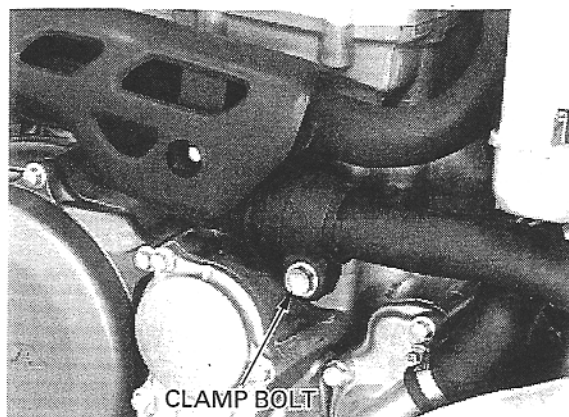

Tighten the muffler clamp bolt to the specified torque.

TORQUE: 20 N·m (2.0 kgf·m , 14 lbf·ft)

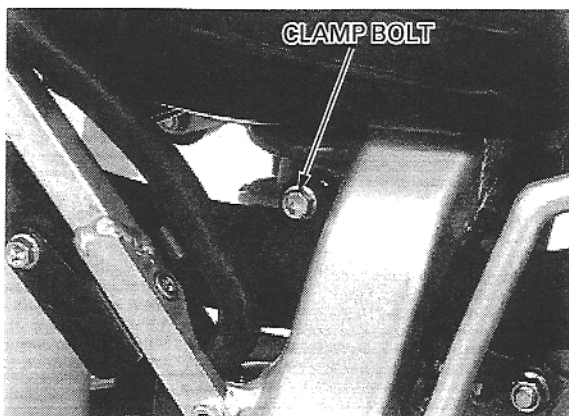


Install the muffler mounting bolts to the specified torque.

TORQUE: 32 N·m (3.3 kgf·m , 24 lbf·ft)

Install the following:

- Radiator mounting bolts
- Radiator shrouds (page 2-2)
- Right side cover (page 2-2)

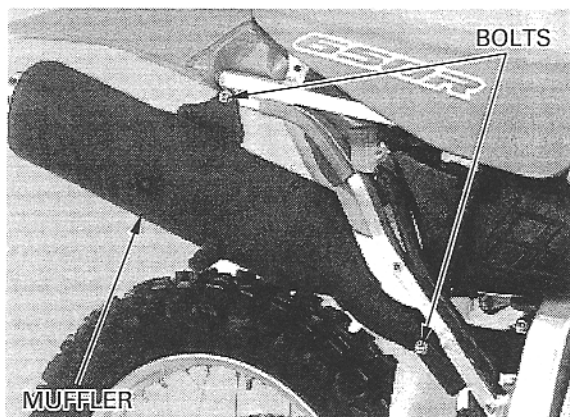

SKID PLATE

REMOVAL/INSTALLATION

Remove the bolts and skid plate.

Installation is in the reverse order of removal.

