


If replacing the handlebar grips:

Apply Honda Bond A or equivalent to the inside surface of the grips and to the clean surface of the left handlebar and the throttle pipe's outer surface. Wait 3–5 minutes and install the grips.

Rotate the grips for even application of the adhesive.

Allow the adhesive to dry for an hour before using.

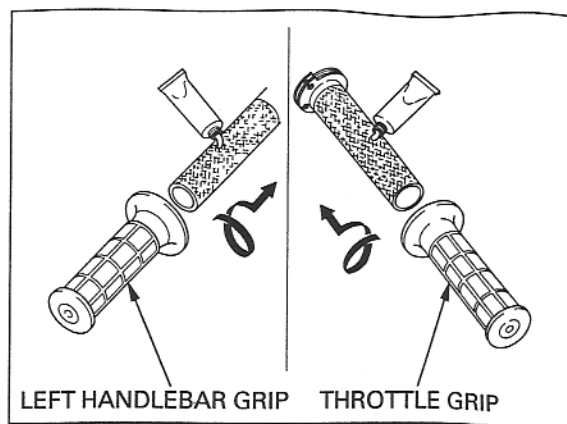


INSTALLATION

Place the handlebar onto the lower holder of the top bridge and align the punch mark on the handlebar with the top of the lower holder.

Install the upper holders with the punch marks facing forward.

Install the bolts and tighten the forward bolts first, then tighten the rear bolts.

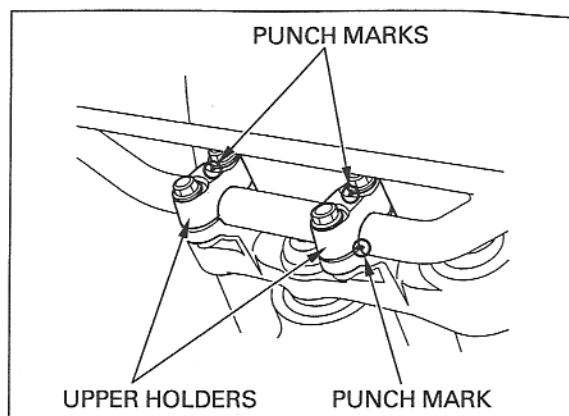


Install the master cylinder and holder with the "UP" mark facing up.

Align its slits with the punch mark on the handlebar and tighten the upper bolt first, then tighten the lower bolt.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Install the engine stop switch and holder; the end of the switch is keeping in line with the punch mark. Tighten the engine stop switch screws securely.

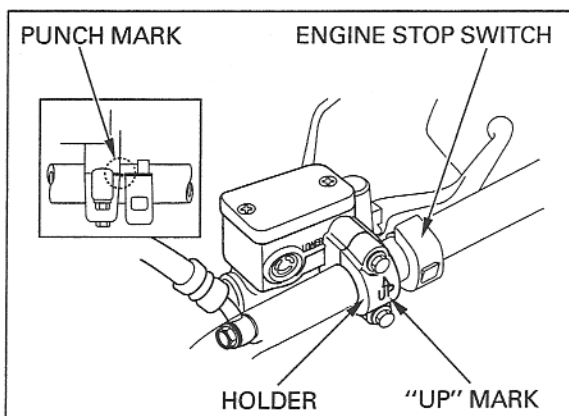

Apply a thin coat of grease to the sliding surface of the throttle grip.

Install the throttle grip to the handlebar.

