



Check the brake fluid level from the inspection window (1) of the rear cowl with the motorcycle in an upright position. Brake fluid must be added to the reservoir whenever the fluid level begins to reach the LOWER level mark (2). Remove the rear cowl (page 45). Remove the bolt (3), reservoir cap (4), diaphragm plate (5) and diaphragm (6). Fill the reservoir with DOT 4 BRAKE FLUID from a sealed container up to the UPPER level mark (7). Reinstall the diaphragm, diaphragm plate and cap securely.

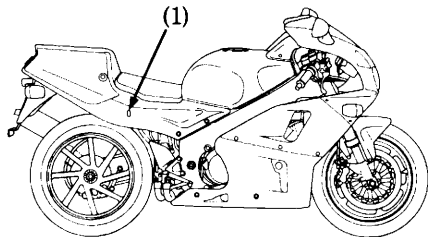

(1) Inspection window

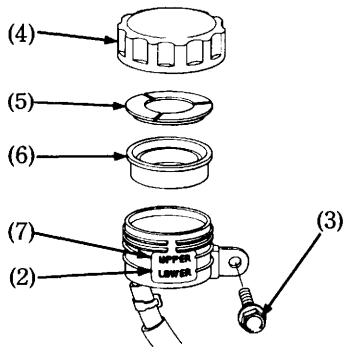

- | | |
|----------------------|----------------------|
| (2) LOWER level mark | (6) Diaphragm |
| (3) Bolt | (7) UPPER level mark |
| (4) Reservoir cap | |
| (5) Diaphragm plate | |

Other Checks:

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.