


3. At the lower end of the cable, loosen the lock nut (4). Turn the front brake adjusting nut (3) to obtain the specified free play. Tighten the lock nut (4) and check the adjustment.
4. Apply the brake several times and check for free wheel rotation after the brake lever is released.

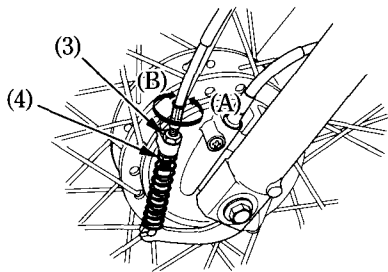

- (3) Front brake adjusting nut
- (4) Lock nut
- (A) Increase free play
- (B) Decrease free play

If proper adjustment cannot be obtained by this method, see your Honda dealer.

Other Checks:

Check the brake cable for kinks or signs of wear that could cause sticking or failure. Lubricate the brake cable with a commercially available cable lubricant to prevent premature wear and corrosion. Make sure the brake arm, spring and fasteners are in good condition.