


8. Check that the other three corners of the caliper holder (7) have a clearance of at least 0.7 mm (0.028 in) between the caliper holder and disc.
9. After installing the wheel, apply the brakes several times and check for free wheel rotation when released.

WARNING:

- Failure to provide adequate disc to caliper holder clearance may damage the brake discs and impair braking efficiency.
- If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.

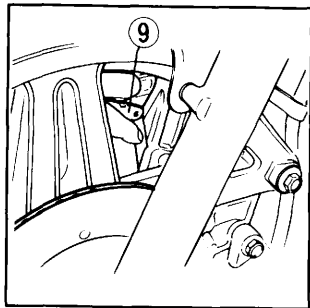

-
8. Compruebe que las otras tres esquinas del soporte del calibre (7) tienen un espacio de al menos 0,7 mm (0,028 pulgadas) entre el soporte del calibre y el disco.
 9. Tras montar la rueda, tire del freno varias veces y compruebe si la rueda gira libremente cuando se suelta el mismo.

ATENCIÓN:

- Un fallo en la colocación adecuada del disco en el espacio abierto del soporte del calibre puede dañar los discos del freno y perjudicar la eficacia del frenado.
- Si no se usara una llave de torsión, visite a su distribuidor autorizado Honda para verificar el ensamblaje adecuado lo antes posible.