


LEFT BODY COVER

Removal:

1. Remove the rear seat (page 94).
2. Remove the body cover skirt (page 103).
3. Remove the screw A (1), screw B (2) and clip (3).
4. Release the tab A (4) and tab B (5).
5. Remove the hook A (6) from the side of turn signal light case (7).
6. Remove the prongs A (8) from the slots A (9).
7. Carefully remove the prongs B (10) from the grommets (11) unhook the tab C (12).
8. Lift lightly the left body cover (13), and remove it.

Installation:

- Installation can be done in the reverse order of removal.

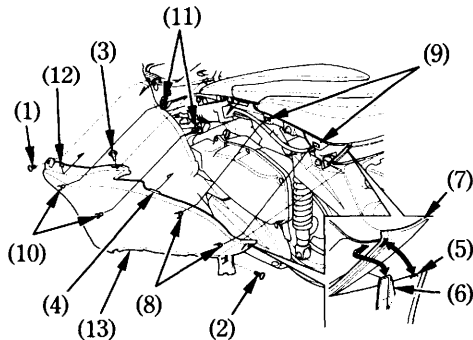

- | | |
|----------------------------|----------------------|
| (1) Screw A | (8) Prongs A |
| (2) Screw B | (9) Slots A |
| (3) Clip | (10) Prongs B |
| (4) Tab A | (11) Grommets |
| (5) Tab B | (12) Tab C |
| (6) Hook A | (13) Left body cover |
| (7) Turn signal light case | |