


Throttle Cable Inspection


Check for smooth rotation of the throttle grip from the full open to the full close positions. Check both when at full left and full right steering positions. Inspect the condition of throttle cable from the throttle grip down to the carburetor. If the cable is kinked, chafed or improperly routed, it should be replaced and/or re-routed. Recheck cable for tension or stress at both full left and full right steering positions.

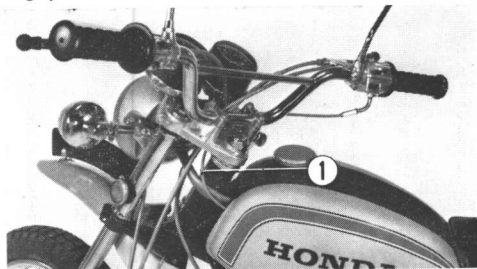

① Throttle cable

Throttle Cable Adjustment

Standard throttle grip free play is approximately $10\sim 15^\circ$ of the grip rotation. This free play can be attained by adjustment of the throttle cable adjuster ②. Loosen the lock nut ① and turn the adjuster until the grip free play rotation becomes $10\sim 15^\circ$.

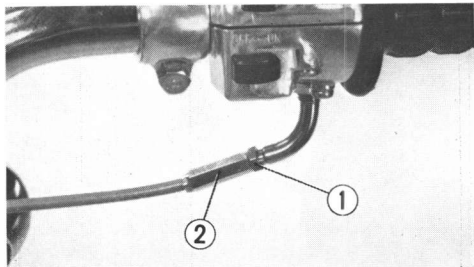

① Lock nut
② Throttle cable adjuster