


## Throttle Cable Inspection

Check for smooth rotation of the throttle grip from the fully open to the fully closed positions. Check both when at full left and full right steering positions. Inspect the condition of the throttle cable ① from the throttle grip down to the carburetor. If the cable is kinked, chafed or improperly routed, it should be replaced and/or re-routed. Recheck cable for tension or stress at both full left and full right steering positions.

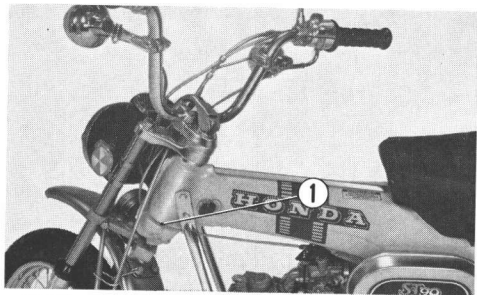


① Throttle cable

## Throttle Grip Free Play Adjustment

Standard throttle grip free play is approximately 10–15° of grip rotation. This free play can be attained by adjustment of the throttle cable adjuster.

Loosen the lock nut ② and turn the adjuster ① until grip free play becomes 10–15°.

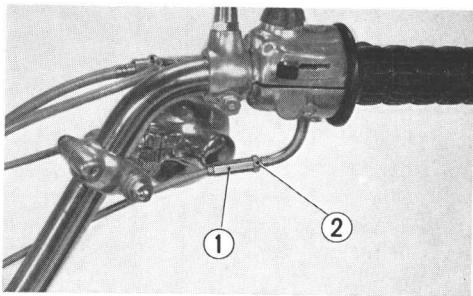

① Throttle cable adjuster

② Lock nut