

Riding in Reverse

If you need to ride in reverse, make sure the area behind you is clear and your ATV has a reverse gear rev limiter that assures low operating speed while backing up.


⚠ WARNING

Improperly operating in reverse could cause you to hit an obstacle or person behind you, resulting in serious injury.


Make sure there are no obstacles or people behind you before selecting reverse gear. When it is safe to proceed, go slowly.

1. Bring the vehicle to a complete stop, pull in the clutch lever/parking brake lever (1) and depress the shift lever (2) to shift into 1st gear.
2. Depress and hold down the rear brake pedal.
3. Be sure there are no obstacles or people in the way.
4. Leaving your left hand on the clutch lever/parking brake lever, remove your right hand from the throttle and place it on the reverse assist knob (3). Turn the reverse assist knob clockwise.

LEFT HANDLEBAR

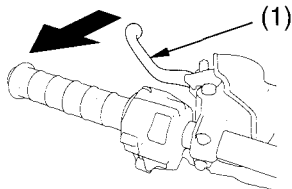

LEFT SIDE

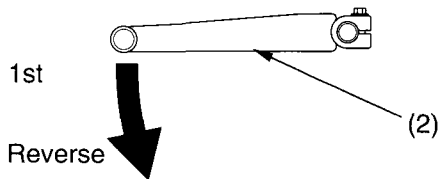

(1) clutch lever/
parking brake lever

(2) shift lever