


Measure the clearance (9) between each surface of the left brake disc (10) and the left caliper holder (11) with a 0.7 mm (0.028 in) feeler gauge (12) (see sketch). If the gauge inserts easily, tighten the right and left axle pinch bolts (5) to the specified torque.

Axle pinch bolt torque:

22 N·m (2.2 kg-m, 16 ft-lb)

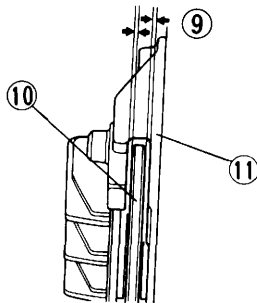


(9) Clearance  
(10) Brake disc

(11) Caliper holder

**▲ WARNING**

- \* **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.**

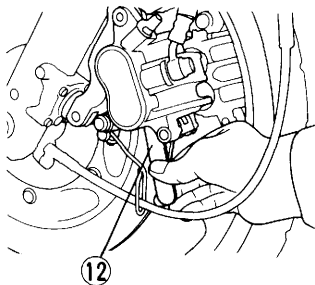

(12) Feeler gauge