



Rear Brake


Adjust the freeplay of the brake lever with the front wheel pointed straight ahead.

Adjustment:

1. Place the scooter on its center stand.
2. Measure the distance the rear brake lever (1) moves before the brake starts to take hold.

Freeplay at the tip of the brake lever should be:

10–20 mm (0.4–0.8 in)

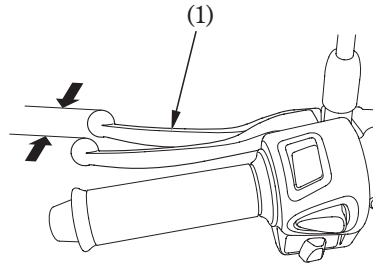

(1) Rear brake lever

