

Wheel Spoke Retighening

Retighten the wheel spokes after the first 600 miles (1,000 Km) and every 3,000 miles (5,000 Km) thereafter.


Torque specification:
20~45 kg. mm.

Front Brake Adjustment

Free play, measured at the tip of the front brake lever ①, should be maintained at **0.8–1.2 in. (20–30 mm)**. Free play is the distance the brake lever moves before the brake starts to engage.

Major adjustments should be made using the adjuster located at the front wheel.

1. Loosen the lock nut ② and then turn the front brake adjusting nut ③.

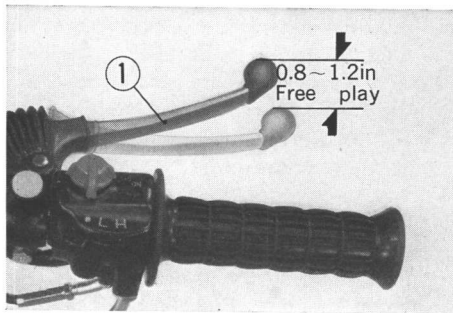

① Front brake lever