


Turning the nut in direction **A** will decrease the brake lever free play and turning the nut in direction **B** will increase the play.

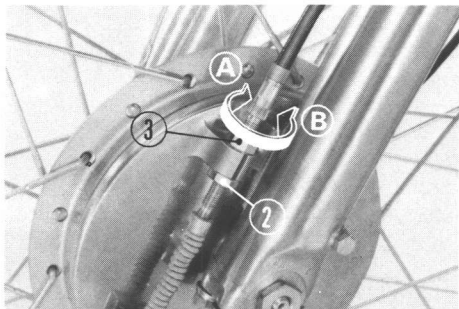

- ② Lock nut
- ③ Front brake adjusting nut
- ④ Dust cover    ⑤ Lock nut
- ⑥ Front brake cable adjuster

2. Minor adjustments can be made with the front brake cable adjuster on the front brake lever.

Remove the dust cover **④**, loosen the lock nut **⑤** and turn the front brake cable adjuster **⑥**. Turning the adjuster in direction **A** will decrease the brake lever free play and turning the adjuster in direction **B** will increase the play.

