


4. Check the chain slipper (2) and chain guide slider (3) for wear.

When the depth (5) of the chain slipper reaches the limit, the chain slipper must be replaced. Chain slipper depth limit:

8 mm (0.3 in)

Replace the chain guide slider if the chain is visible through the wear inspection window (4).

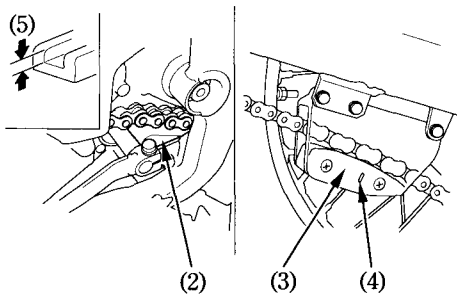


(2) Chain slipper
(3) Chain guide slider

(4) Inspection window
(5) Depth

5. Measure a section of the drive chain to determine whether the chain is worn beyond its service limit. Remove the drive chain and measure the distance between a span of pins from pin center to pin center. If the distance exceeds the service limit, the chain is worn out and should be replaced.

New chain: 1,603 mm (63.1 in)

Service limit: 1,611 mm (63.4 in)

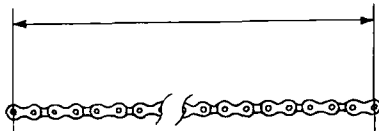

Span of pins measured: 102