
Throttle

Throttle Freeplay

Refer to Safety Precautions on page 78.

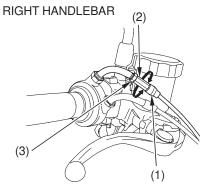

- (1) throttle cable boot
- (2) adjuster
- (3) lock nut

Inspection

Check freeplay at the throttle grip flange. Freeplay:

1/16 - 3/16 in (2 - 4 mm)

If necessary, adjust to the specified range.

Adjustment

- 1. Slide the throttle cable boot (1) off the adjuster (2).
- 2. Loosen the lock nut (3).
- 3. Turn the adjuster.
- After adjustment, check for smooth rotation of the throttle grip from fully closed to fully open in all steering positions.
- Tighten the lock nut and return the throttle cable boot securely over the adjuster.

120 Servicing Your Honda