


If You Have a Flat Tire

2. Support the motorcycle securely, raise the rear wheel off the ground.
3. Loosen the rear axle nut (1).
4. Loosen the drive chain lock nuts (2) and turn the drive chain adjusting bolts (3) so the rear wheel can be moved all the way forward for maximum drive chain slack.
5. Remove the rear axle nut and washer.

6. Remove the drive chain (4) from the rear wheel sprocket by pushing the rear wheel forward.

LEFT REAR

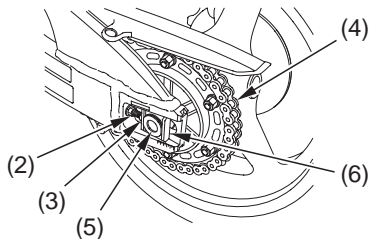

- (4) drive chain
(5) rear axle shaft
(6) left chain adjustment plate