


**CBR600RA**

When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

## Front Wheel

### Removal

1. Place your vehicle on a firm, level surface.
2. Cover both sides of the front wheel and brake caliper with protective tape or cloth.

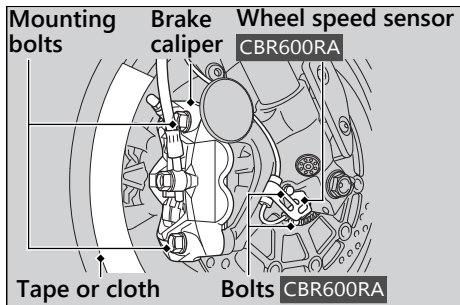

**3. CBR600RA**

Remove the wheel speed sensor by removing the bolts.

4. On the right side, remove the mounting bolts and remove the brake caliper.
  - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
  - Do not pull the brake lever or push the brake pedal while the brake caliper is removed.
  - Take care to prevent the brake caliper from scratching the wheel during removal.
5. On the left side, remove the mounting bolts and remove the brake caliper.
  - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
  - Do not pull the brake lever or push the brake pedal while the brake caliper is removed.
  - Take care to prevent the brake caliper from scratching the wheel during removal.